

---

## SECTION 9C

# HORNS

**CAUTION:** *Disconnect the negative battery cable before removing or installing any electrical unit or when a tool or equipment could easily come in contact with exposed electrical terminals. Disconnecting this cable will help prevent personal injury and damage to the vehicle. The ignition must also be in B unless otherwise noted.*

### TABLE OF CONTENTS

<b>Description and Operation</b> .....	<b>9C-2</b>	Horn .....	9C-3
Horn .....	9C-2	<b>Schematic and Routing Diagrams</b> .....	<b>9C-4</b>
<b>Repair Instructions</b> .....	<b>9C-3</b>	Horn Wiring System .....	9C-4
On-Vehicle Service .....	9C-3		

## DESCRIPTION AND OPERATION




### HORN

The horn is located under the hood. It is attached near the radiator at the front of the vehicle. The horn is actu-

ated by pressing the steering wheel pad, which grounds the horn's electrical circuit.

# REPAIR INSTRUCTIONS

## ON-VEHICLE SERVICE

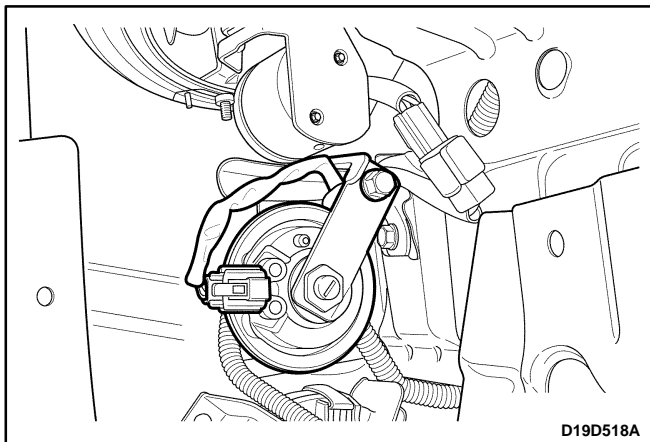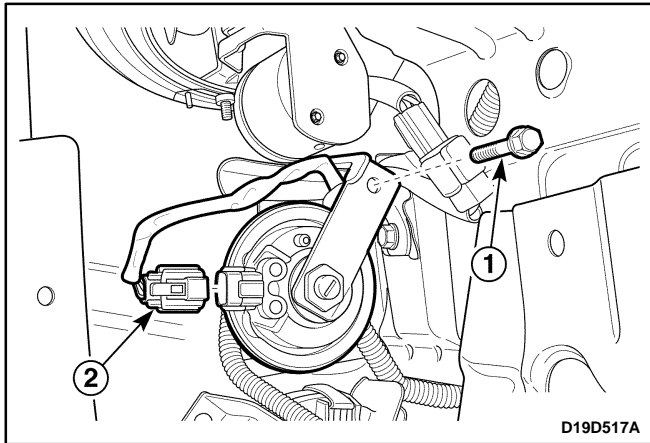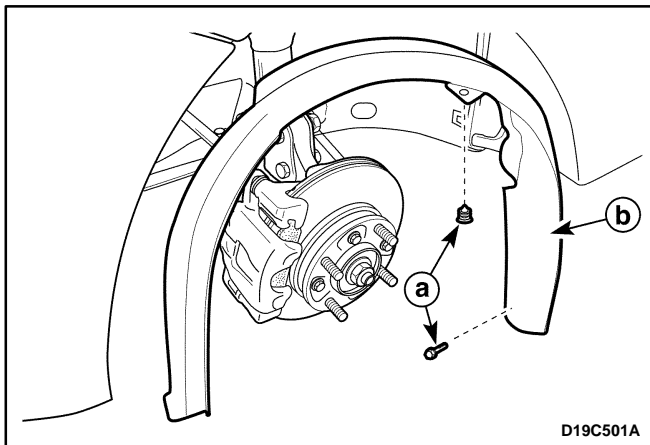

### HORN

#### Removal Procedure

1. Disconnect the negative battery cable.
2. Raise and suitably support the vehicle.
3. Remove the front wheels.
4. Remove the front wheel house splash shield.
  - Remove the clip and bolts.
    - a. Bolts and clips.
  - Remove the wheel house splash shield.
    - b. Splash shield.
5. Remove the horn.
  - Remove the bolt (1).
  - Disconnect the electrical connector (2).

#### Installation Procedure

1. Install the horn with the bolt.
2. Connect the electrical connector.
3. Install the front wheel house splash shield with the clips and the bolts.
4. Install the front wheels.
5. Lower the vehicle.
6. Connect the negative battery cable.

# SCHEMATIC AND ROUTING DIAGRAMS

## HORN WIRING SYSTEM

