

---

## SECTION 9H

# SEATS

**CAUTION:** *Disconnect the negative battery cable before removing or installing any electrical unit or when a tool or equipment could easily come in contact with exposed electrical terminals. Disconnecting this cable will help prevent personal injury and damage to the vehicle. The ignition must also be in B unless otherwise noted.*

### TABLE OF CONTENTS

<b>Description and Operation</b> .....	<b>9H-2</b>	Front Seat Cushion .....	9H-7
Seats .....	9H-2	Front Seats Guide Rail .....	9H-9
<b>Component Locator</b> .....	<b>9H-3</b>	Front Seat Cushion Frame .....	9H-9
Front Seat .....	9H-3	Rear Seatback .....	9H-10
Rear Seat .....	9H-4	Rear Seat Cushion .....	9H-11
<b>Repair Instructions</b> .....	<b>9H-5</b>	Rear Seatback Latch .....	9H-11
On-Vehicle Service .....	9H-5	Rear Seatback Hinge .....	9H-12
Front Seats .....	9H-5	<b>Specifications</b> .....	<b>9H-13</b>
Head Restraint .....	9H-5	Fastener Tightening Specifications .....	9H-13
Front Seatback .....	9H-6		

## DESCRIPTION AND OPERATION

### SEATS


**Important:** Do not attempt to change the designed seat position by altering the designed seat adjuster-to-floor pan anchor provisions or the seat adjuster-to-seat frame anchor provisions. Changing the seat position could affect the performance of the seat system.

This vehicle is equipped with low-backed front seats with separate head restraints and a three-passenger

folding rear seat. Split folding rear seat is optional. Seats cushions and seatbacks have formed foam pads, which fit the contours of the full-panel seatback frame assembly and the designed contour of the seat cushion frame. There are no front seat forward or rearward relocation provisions provided at either the seat adjuster-to-seat frame or the seat adjuster-to-floor pan anchor attachments.

# COMPONENT LOCATOR

## FRONT SEAT

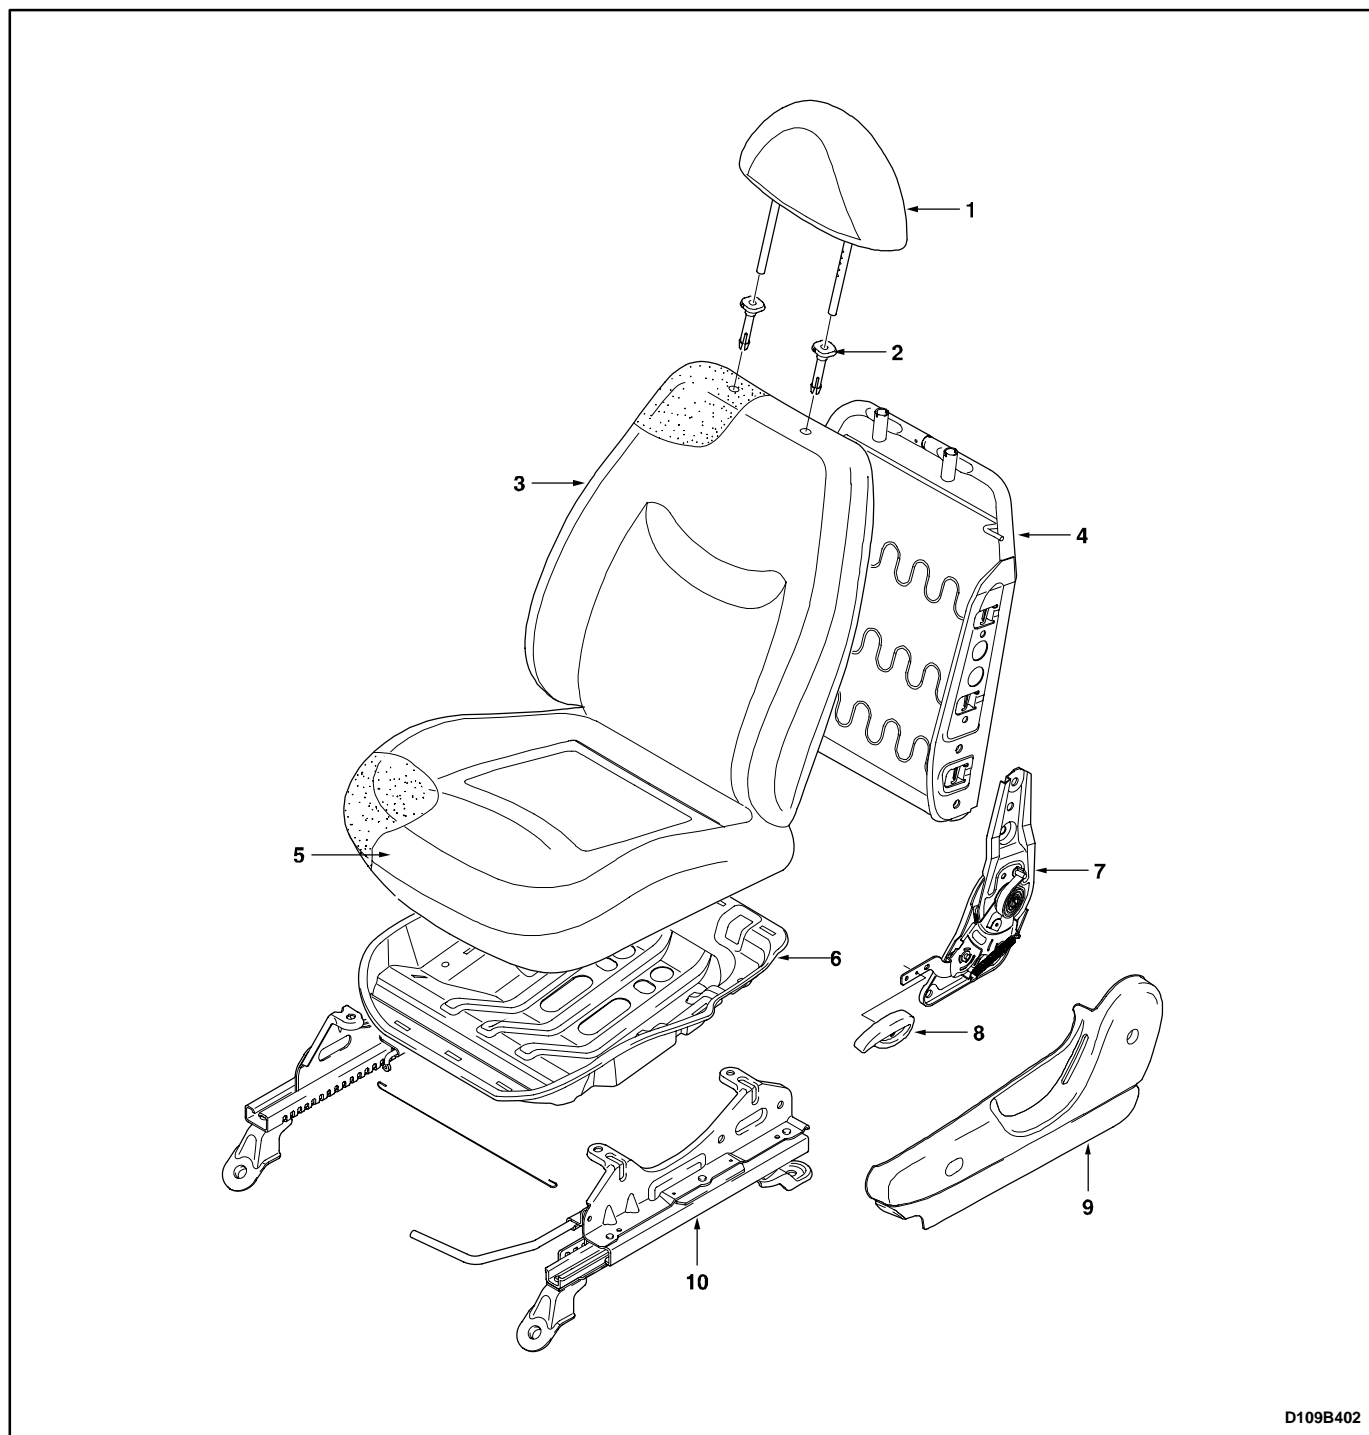


D109B402

1. Head Restraint
2. Guide Sleeve
3. Seatback
4. Seatback Frame
5. Seat Cushion

6. Seat Cushion Frame
7. Recliner
8. Recliner Knob
9. Seat Side Cover
10. Guide Rail

## REAR SEAT

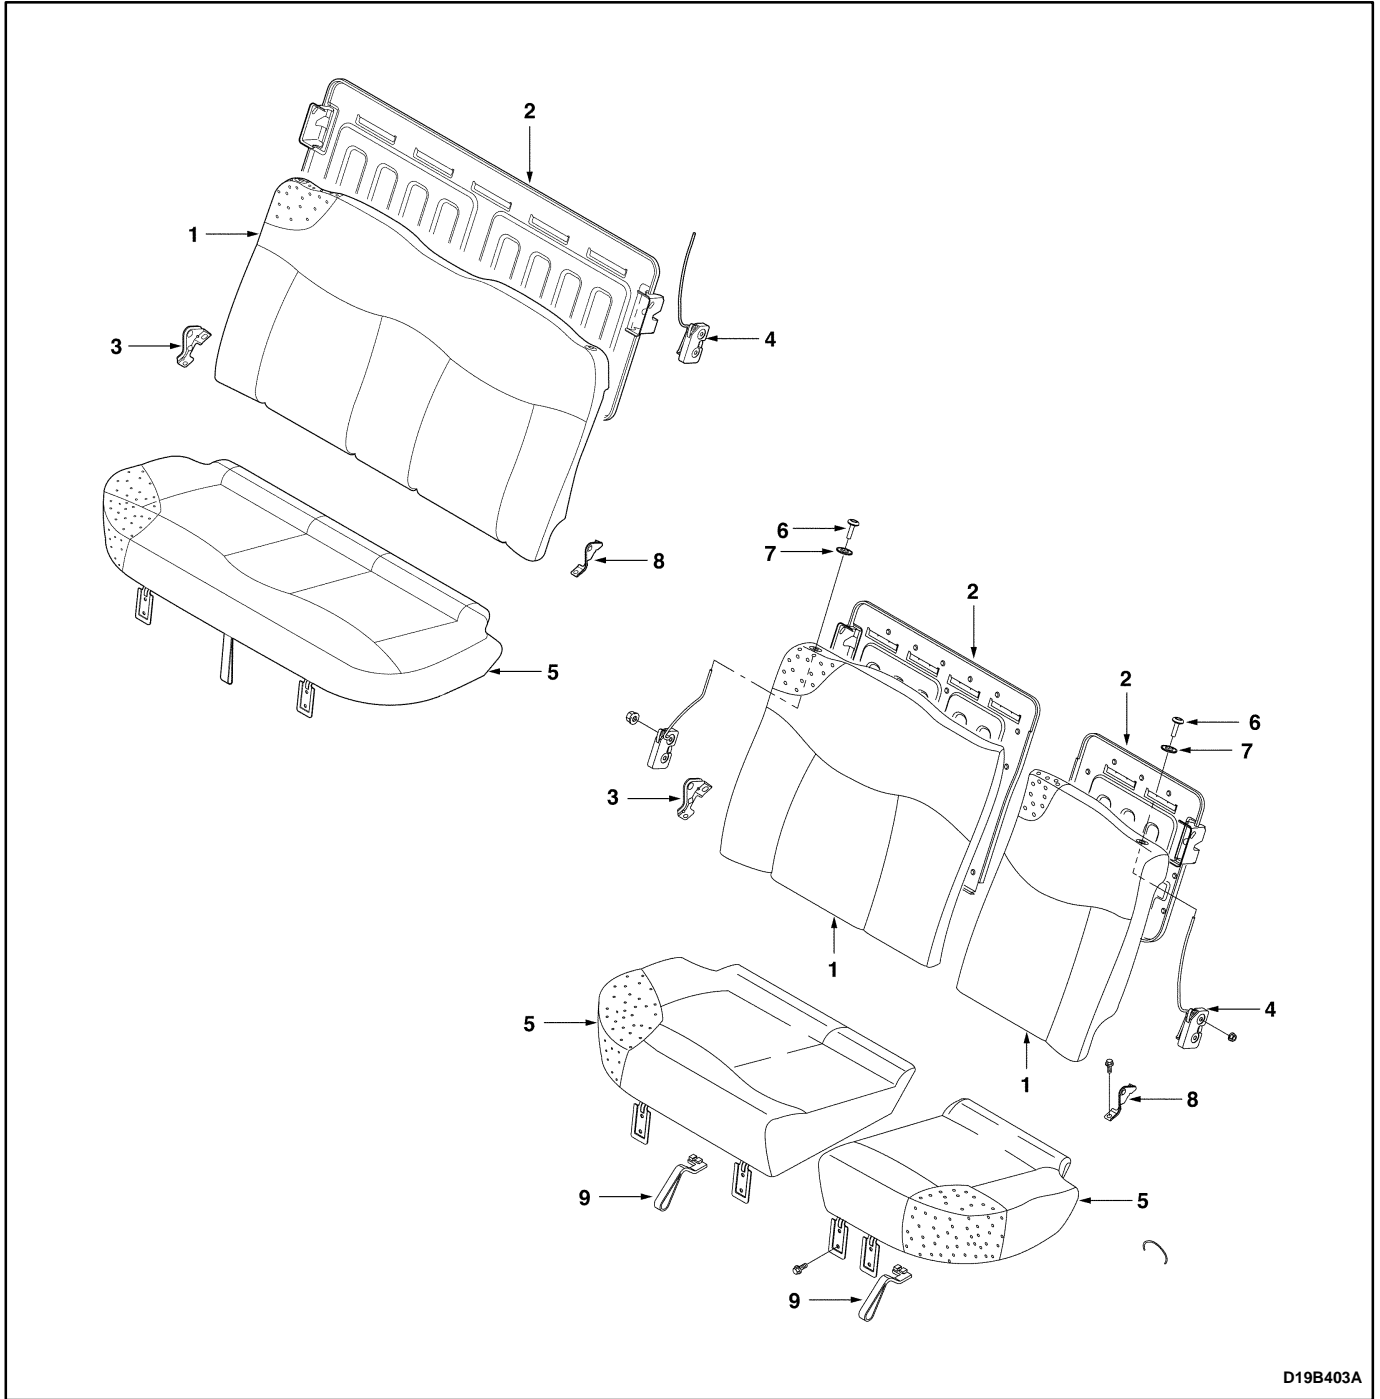


D19B403A

1. Rear Seatback Cushion
2. Rear Seatback Frame
3. Rear Seat Hinge
4. Rear Seat Lock
5. Rear Seat Cushion

6. Seat Release Knob
7. Eyelet
8. Seat Back Hinge
9. Rear Cushion Pull Loop

# REPAIR INSTRUCTIONS


## ON-VEHICLE SERVICE

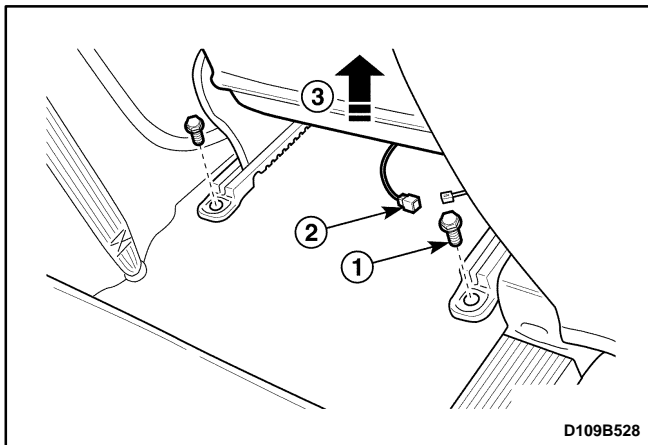

### FRONT SEATS

#### Removal Procedure

1. Disconnect the negative battery cable.
2. Remove the front seat.
  - Remove the bolts (1).
  - Disconnect the seat belt warning lamp connector (2).
  - Remove the seat (3).

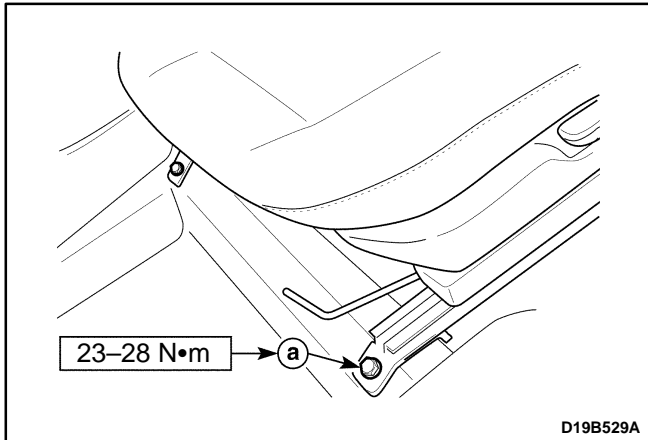


#### Installation Procedure

1. Connect the seat belt warning lamp connector.
2. Install the front seat with the bolts.

#### Tighten

Tighten the seat bolt to 23-28 N·m (17-21 lb-ft).


- a. Seat bolt.
3. Connect the negative battery cable.

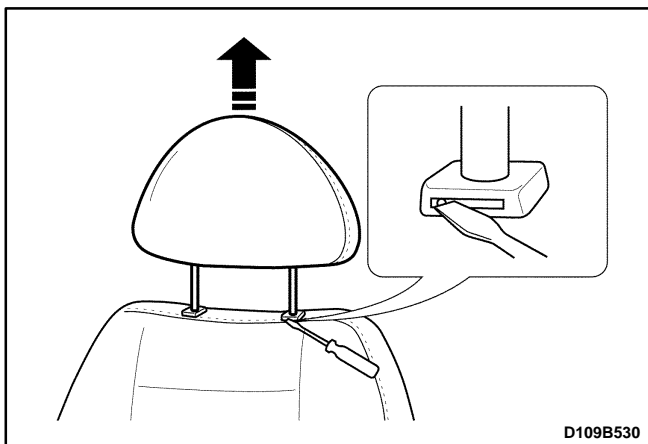

### HEAD RESTRAINT


#### Removal Procedure

1. Pull the head restraint up to the stop position.
2. Insert a small flathead screwdriver in the notch in the left guide sleeve and pull up the head restraint by pushing the head restraint left.

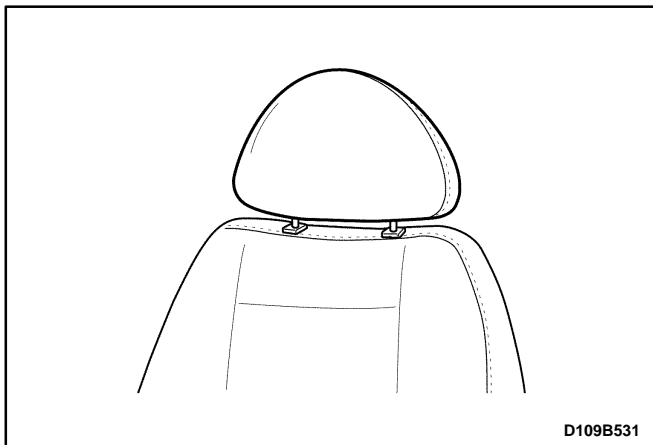

### Installation Procedure


1. Install the head restraint into the guide sleeves. Press down in order to engage the stop pin.

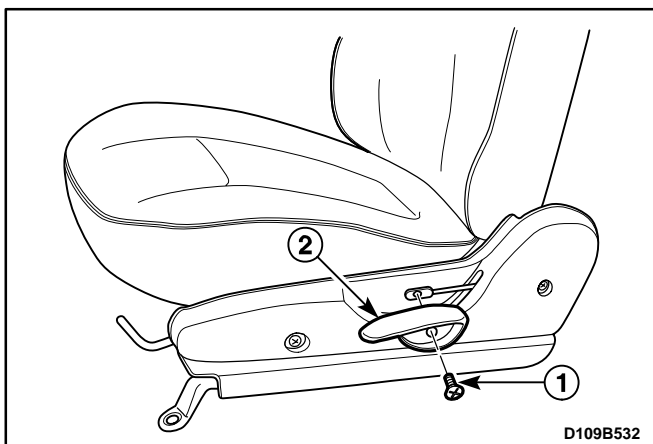


### FRONT SEATBACK

#### Removal Procedure





1. Disconnect the negative battery.
2. Remove the front seat assembly. Refer to "Front Seats" in this section.
3. Remove the recliner knob from the front seat.
  - Remove the screw (1).
  - Remove the recliner knob (2).

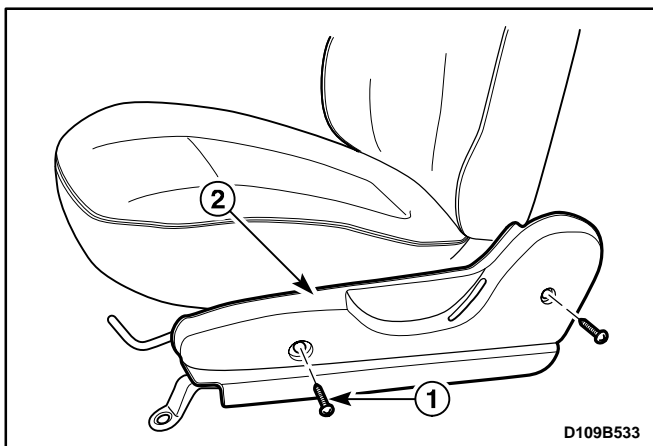

4. Remove the recliner cover from the front seat.
  - Remove the screws (1).
  - Remove the recliner cover (2).

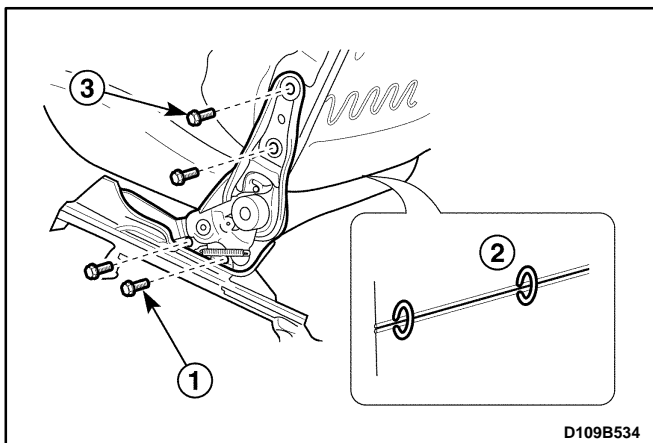

5. Remove the recliner from the front seat.
  - Remove the bolts on the seat cushion (1).
  - Remove the seatback cover hog rings.
  - Remove the seatback cover (2).
  - Remove the bolts on the seatback (3).

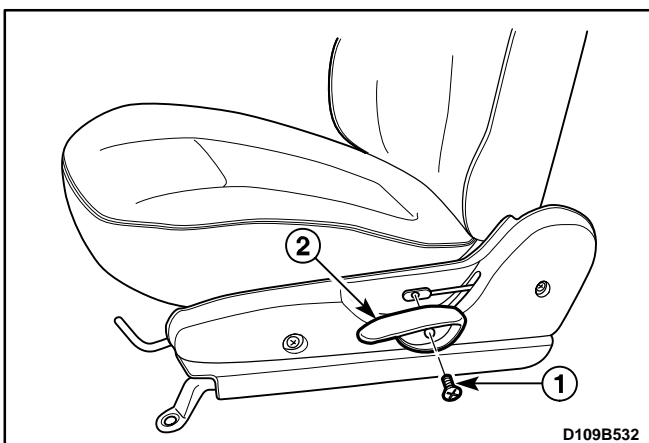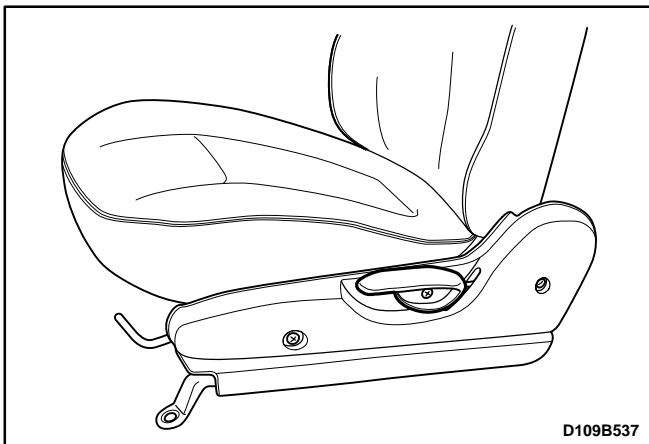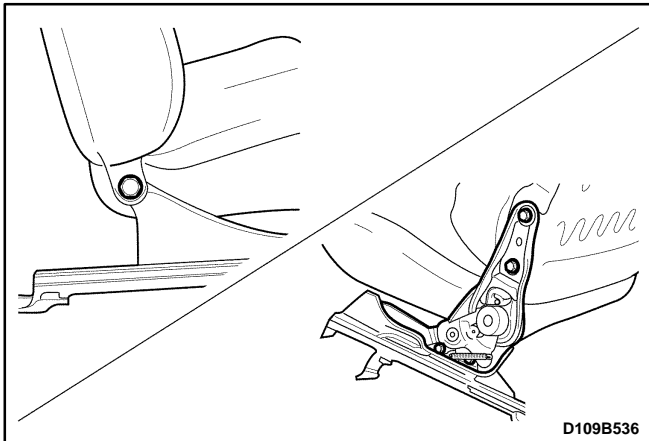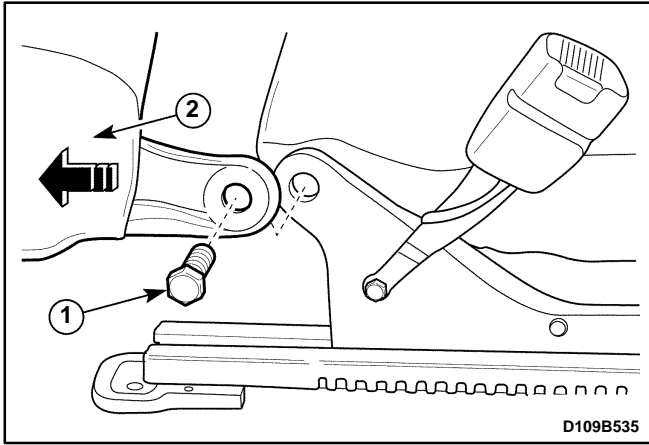

6. Remove the seatback bolt from the seat cushion (1).
7. Remove the seatback assembly (2).

### Installation Procedure


1. Install the seatback assembly with the bolt.
2. Install the recliner with the bolts
3. Install the seatback cover with the hog rings.

4. Install the recliner knob and the cover with the screws.
5. Install the front seat assembly. Refer to "Front Seat" in this section.
6. Connect the negative battery cable.


### FRONT SEAT CUSHION

#### Removal Procedure


1. Disconnect the negative battery cable.
2. Remove the front seat assembly. Refer to "Front Seat" in this section.
3. Remove the seat belt buckle. Refer to *Section 8A, Seat Belts*.
4. Remove the recliner knob.
  - Remove the screw (1).
  - Remove the recliner knob (2).

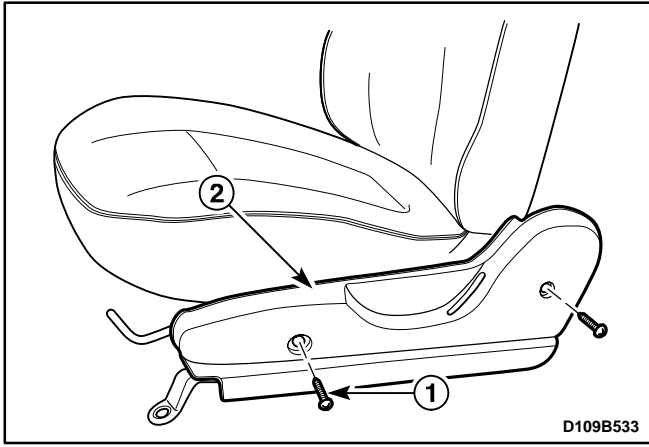

5. Remove the recliner cover.
  - Remove the screws (1).
  - Remove the recliner cover (2).

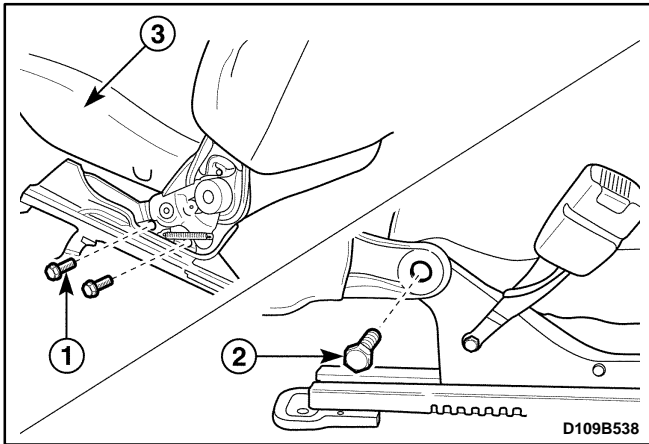


6. Remove the seat cushion.
  - Remove the recliner bolts on the seat cushion (1).
  - Remove the seatback bolt (2).
  - Remove the seat cushion (3).

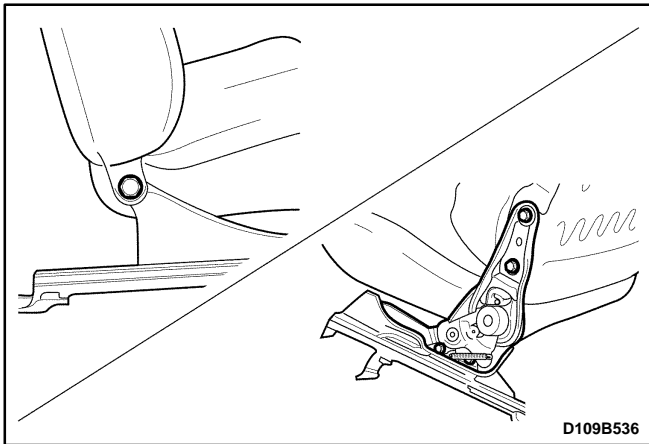


### Installation Procedure

1. Install the seat cushion with the seatback bolt and the recliner bolts.

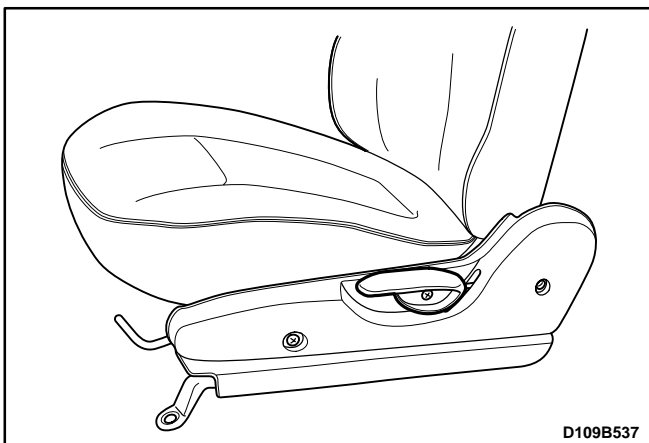

2. Install the recliner cover and the recliner knob with the screws.
3. Install the seat belt buckle. Refer to *Section 8A, Seat Belts*.
4. Install the front seat assembly. Refer to "Front Seats" in this section.
5. Connect the negative battery cable.




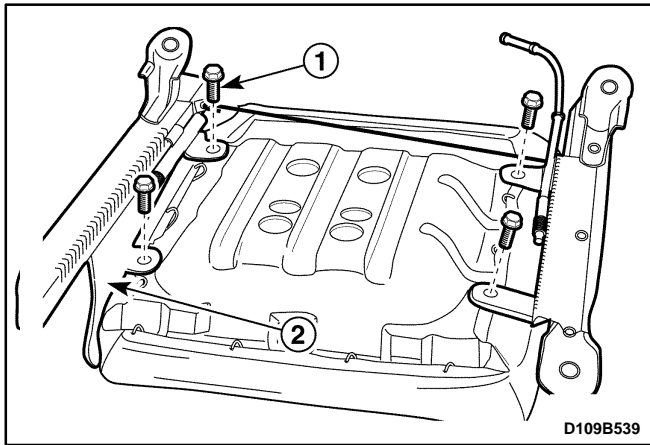

## FRONT SEATS GUIDE RAIL


### Removal Procedure

1. Disconnect the negative battery cable.
2. Remove the front seat assembly. Refer to "Front Seats" in this section.
3. Remove the guide rail from the seat.
  - Remove the bolts (1).
  - Remove the guide rail (2).

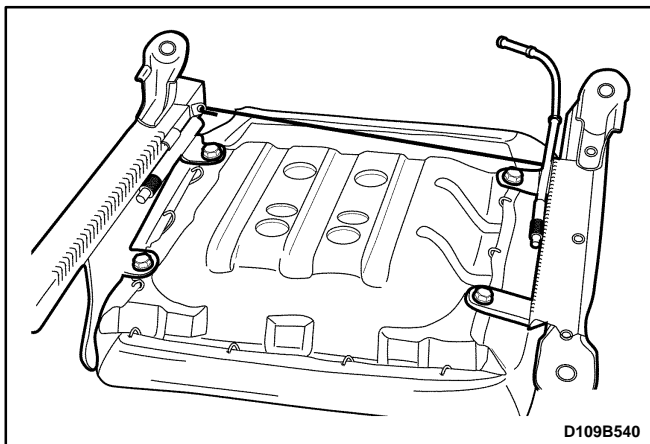

### Installation Procedure


1. Install the guide rail to the seat with the bolts.
2. Install the front seat assembly. Refer to "Front Seat" in this section.
3. Connect the negative battery cable.

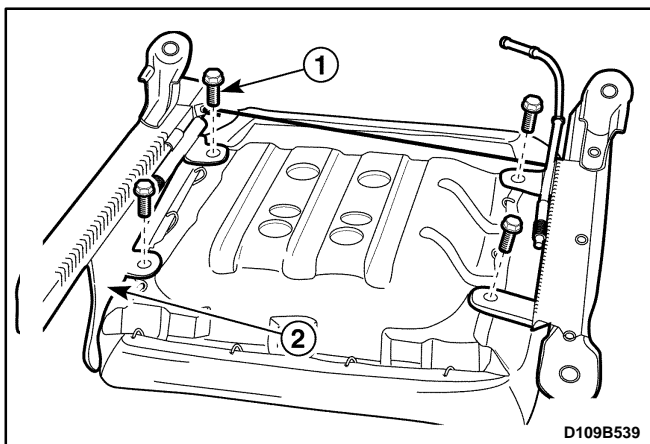


## FRONT SEAT CUSHION FRAME

### Removal Procedure

1. Disconnect the negative battery cable.
2. Remove the front seat cushion. Refer to "Front Seat Cushion" in this section.
3. Remove the guide rail.
  - Remove the bolts (1).
  - Remove the guide rail (2).

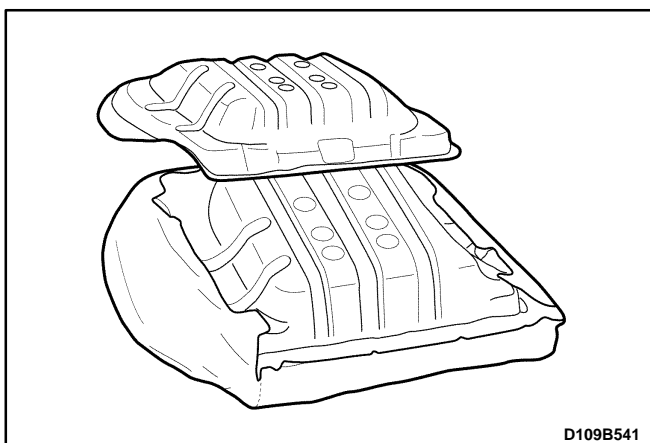


4. Remove the seat cushion cover.
  - Remove the hog rings.
5. Remove the seat cushion frame.

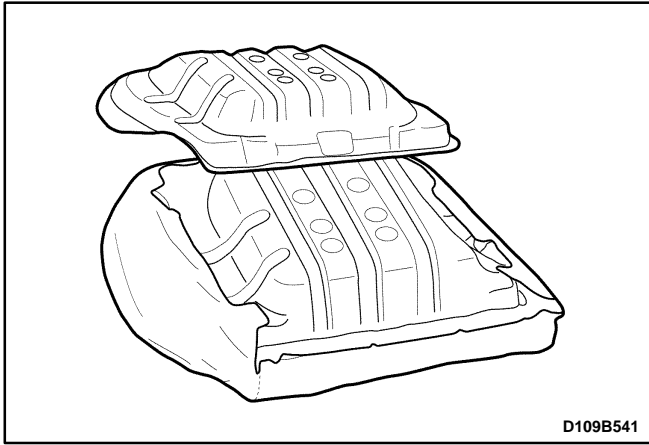


### Installation Procedure

1. Install the seat cushion cover with the hog rings.

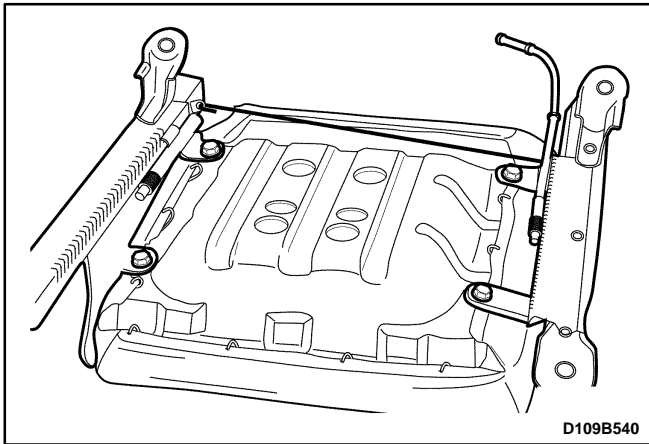


2. Install the guide rail with the bolts.
3. Install the front seat cushion. Refer to "Front Seat Cushion" in this section.
4. Connect the negative battery cable.

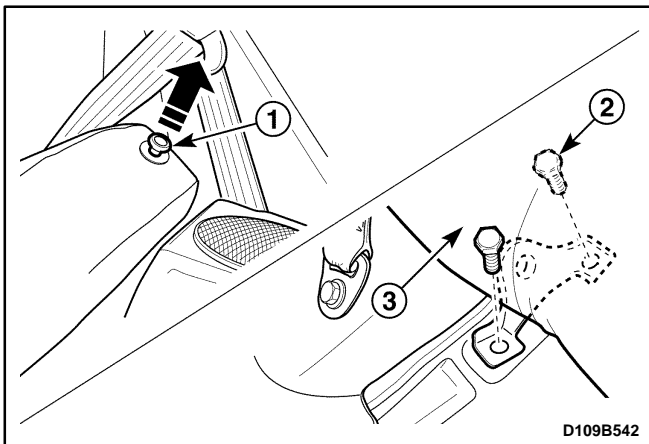

### REAR SEATBACK

#### Removal Procedure

1. Remove the rear seatback.
  - Remove the rear seatback lock by pulling the lock knob upward (1).
  - Remove the seatback hinge bolts (2).
  - Remove the rear seatback (3).

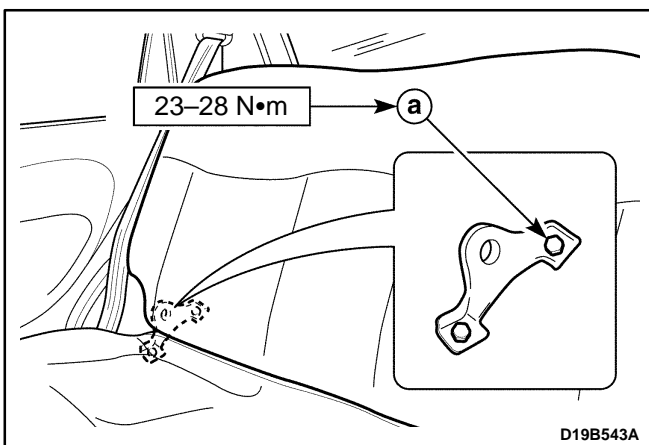

#### Installation Procedure


1. Install the rear seatback with the hinge bolts.

#### Tighten

Tighten the hinge bolts to 23–28 N.m (17–21 lb-ft).

a. Rear seatback hinge bolt.


2. Press the lock knob.

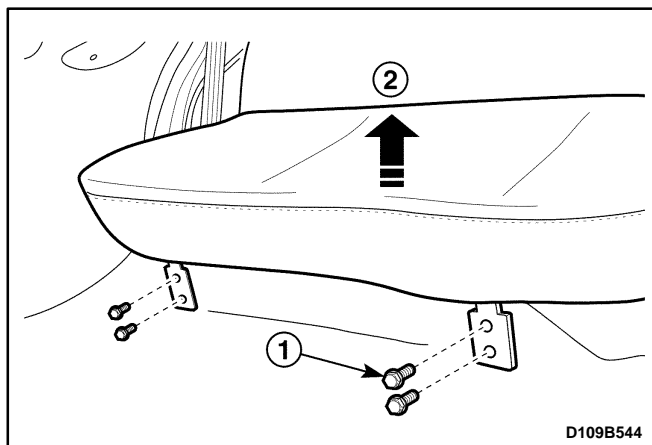

## REAR SEAT CUSHION

### Removal Procedure

1. Remove the rear seat cushion.
  - Remove the bolts (1).
  - Lift and remove the rear seat cushion (2).

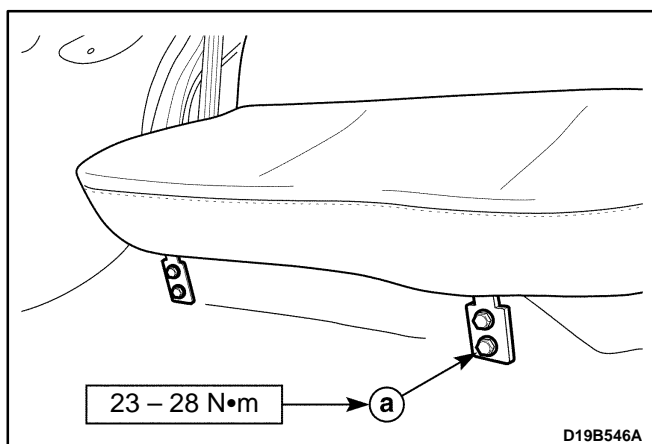


### Installation Procedure

1. Install the rear seat cushion with the bolts.

#### Tighten

Tighten the rear seat cushion bolt to 23–28 N.m (17–21 lb–ft).


- a. Rear seat cushion bolt.

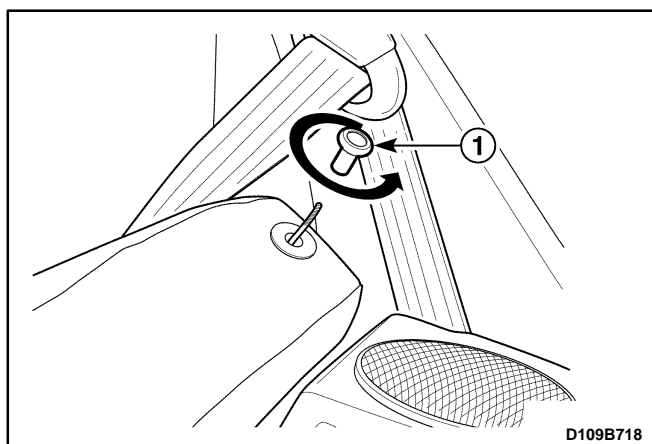


## REAR SEATBACK LATCH

### Removal Procedure

1. Remove the rear seatback assembly. Refer to “Rear Seatback” in this section.
2. Remove the lock knob from the seatback.
  - Remove the lock knob by twisting it (1).

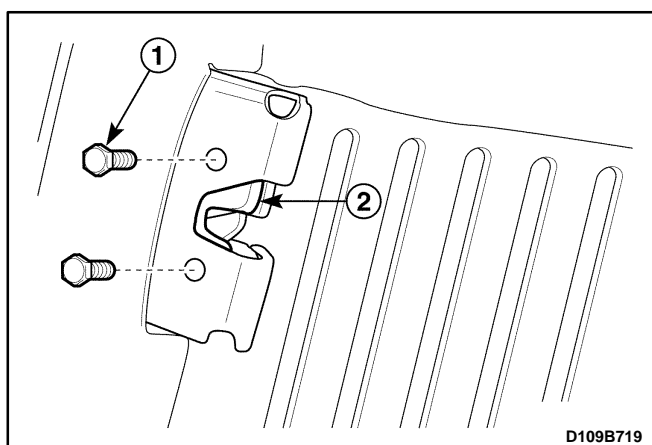


3. Remove the rear seatback cover from the seatback frame.
4. Remove the lock from the seatback frame.
  - Remove the bolts (1).
  - Remove the lock (2).

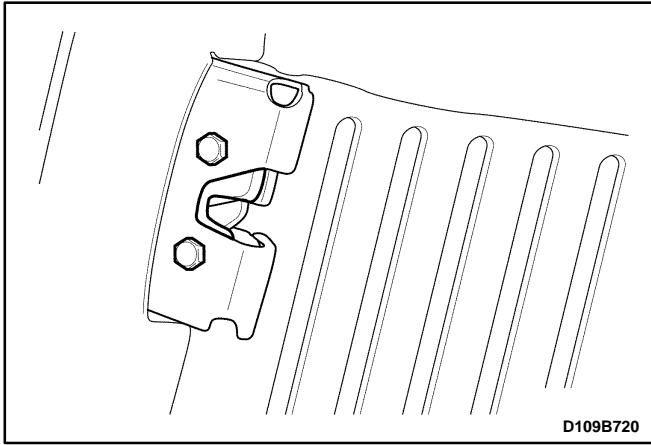


### Installation Procedure

1. Install the lock to the seatback frame with the bolts.
2. Install the rear seatback cover to the seatback frame.

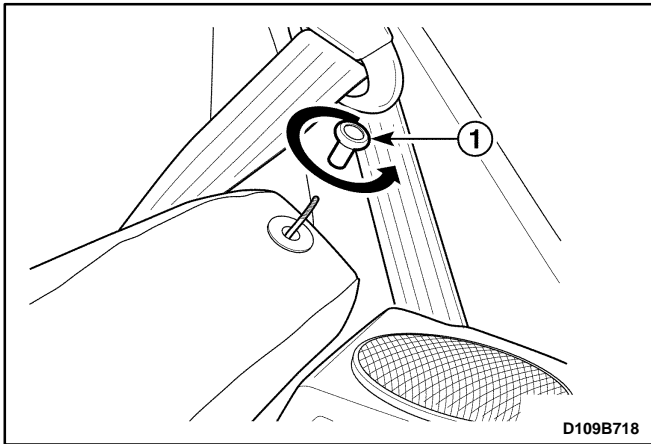


3. Install the lock knob to the seatback.
4. Install the rear seatback assembly. Refer to "Rear Seatback" in this section.

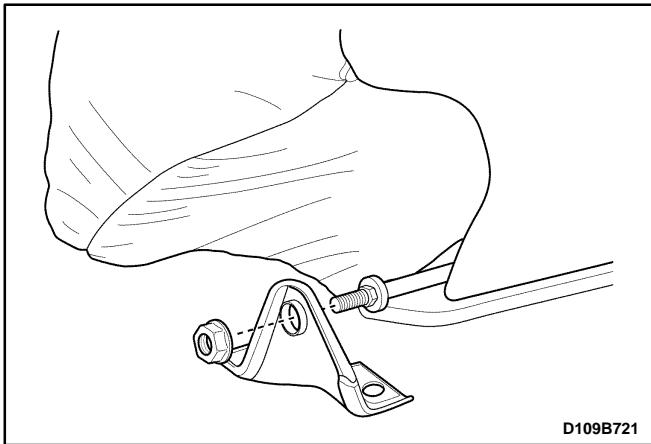

### REAR SEATBACK HINGE

#### Removal Procedure

1. Remove the rear seatback assembly. Refer to "Rear Seatback" in this section.
2. Remove the hinge from the seatback.
  - Remove the nut.
  - Remove the hinge.

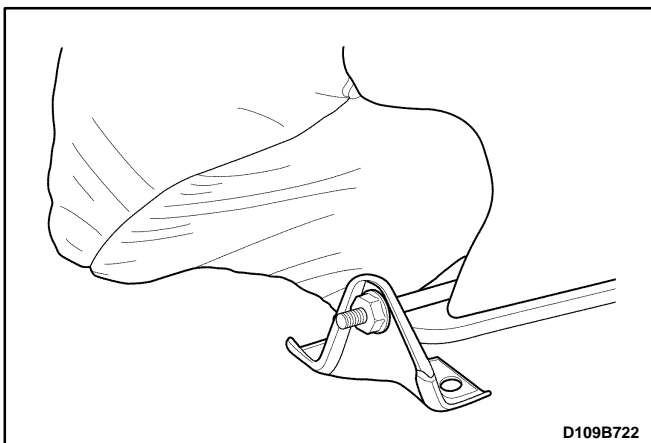

#### Installation Procedure

1. Install the hinge to the seatback with the nut.
2. Install the rear seatback assembly. Refer to "Rear Seatback" in this section.

# SPECIFICATIONS

## FASTENER TIGHTENING SPECIFICATIONS

<b>Application</b>	<b>N•m</b>	<b>Lb-Ft</b>	<b>Lb-In</b>
Front Seat Bolts (Both)	23 – 28	17 – 21	–
Rear Seat Cushion Bolts	23 – 28	17 – 21	–
Rear Seatback Bolts	23 – 28	17 – 21	–