

SECTION 9T

REMOTE KEYLESS ENTRY AND ANTI-THEFT SYSTEM

TABLE OF CONTENTS

Description and Operation	9T-2	Repair Instructions	9T-4
Remote Keyless Entry and Anti-Theft System	9T-2	On-Vehicle Service	9T-4
Remote Locking and Unlocking	9T-2	Siren	9T-4
Security Indicator	9T-2	Password Programming	9T-5
Intrusion Sensing	9T-2	Specifications	9T-6
Siren	9T-2	Fastener Tightening Specifications	9T-6
Vehicle Locator	9T-2	Schematic and Routing Diagrams	9T-7
Autolocking (Safety Lock)	9T-3	Remote Keyless Entry and Anti-Theft System	9T-7
Control Module/Receiver	9T-3		

IMMOBILIZER ANTI-THEFT SYSTEM

TABLE OF CONTENTS

Description and Operation	9T-10	Key Status Errors (FENIX 5MR)	9T-24
Immobilizer System	9T-10	Key Status Errors (SIRIUS D3)	9T-24
Electronically Coded Keys	9T-10	Communication Between Immobilizer and Test Equipment (FENIX 5MR)	9T-25
Detection Coil	9T-10	Communication Between Immobilizer and Test Equipment (SIRIUS D3)	9T-25
Immobilizer Control Unit	9T-10	Repair Instructions	9T-26
Serial Data Link	9T-11	On-Vehicle Service	9T-26
Electronic Control Module (ECM)	9T-11	Key Coding Procedure	9T-26
Security Indicator	9T-12	ID Code Reprogramming	9T-26
Diagnostic Information and Procedures	9T-13	Transponder	9T-27
Immobilizer System (FENIX 5MR)	9T-13	Detection Coil	9T-27
Immobilizer System (SIRIUS D3)	9T-13	Immobilizer Control Unit	9T-28
DTC 1600 ECM Immobilizer Error (No Answer)	9T-14	Specifications	9T-30
DTC 1601 ECM Immobilizer Error (Incorrect Answer)	9T-16	Fastener Tightening Specifications	9T-30
DTC 1602 ECM Immobilizer Error (ECM Locked)	9T-18	Schematic and Routing Diagrams	9T-31
P1628 ECM Immobilizer Error	9T-20	Immobilizer Anti-Theft System	9T-31
P1629 ECM Immobilizer Error	9T-22	Remote Keyless Entry and Immobilizer Anti-theft System	9T-32

BLANK